

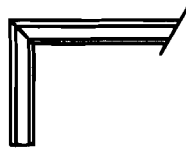


950 SERIES INSTALLATION SPECIFICATIONS

CLEARANCES:

$1/2" + 1/32"$
 $- .000$

STANDARD CABINET TRACK REARS

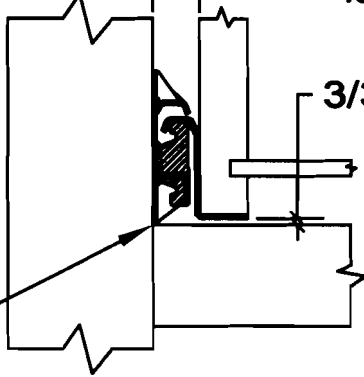

V-NOTCH

S-STANDARD

P-BEND


Install screws in all drawer track and cabinet track holes for maximum load rating.

FLANGE RESTS ON LOWER DRAWER BOX OPENING

Customer may drill additional holes in the cabinet track for their applications.

#6X1/2" FHWS

1/16"

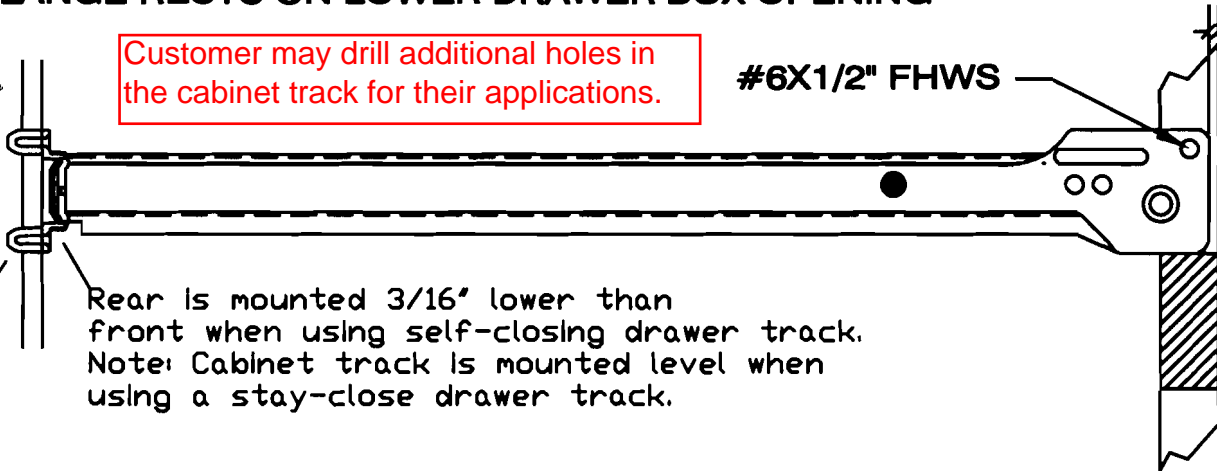

260 brk shown

Rear is mounted $3/16"$ lower than front when using self-closing drawer track. Note: Cabinet track is mounted level when using a stay-close drawer track.

STANDARD TRACK EXTENSION

Required for drawer insertion

$1/2"$
MIN

BOX DEPTH

